

# Raspberry Pi

## How to boot Raspberry Pi without starting x-server?

You can set this in the raspi-config:

```
sudo raspi-config
```

Under 3, "Boot Options", you can set to only load console without X.

Alternatively this command should also do the trick:

```
sudo update-rc.d lightdm disable
```

Unique solution ID: #1157

Author: Daniel Urstöger

Last update: 2016-06-11 20:17